




Torque-Limiting Couplings with Friction Rings: Manual Adjustment of Torque by Locknut

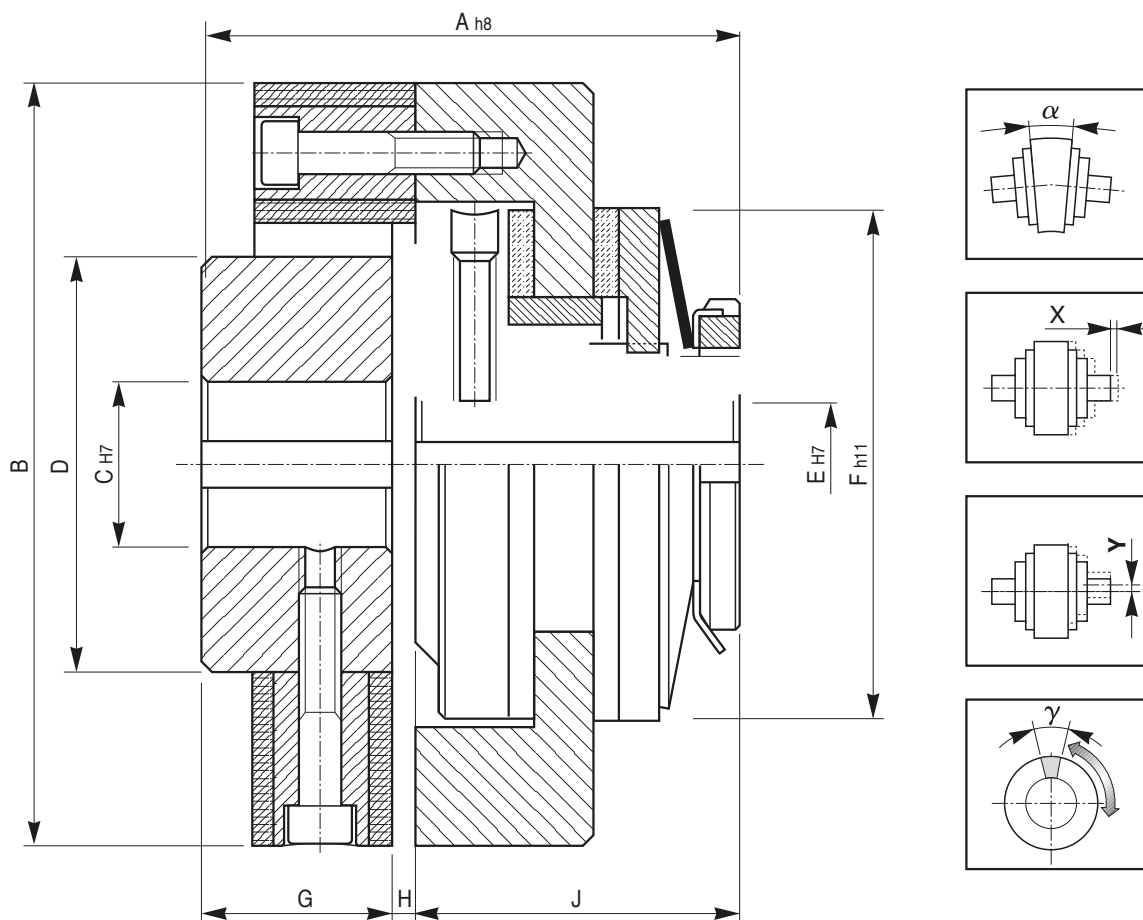

	Static Torque Torques - LIMITING COUPLING		Speed R.P.M. max	Coupling model W	Torque - COUPLING Nm max	Weight (kg)
	Ms min (Nm)	Ms max (Nm)				
050	5	30	6000	2	60	1,2
070	15	130	4000	8	280	3,2
090	26	250	3000	16	560	5
115	50	500	2500	30	1400	7,5
140	110	1100	2000	90	3150	13
170	140	1400	1700	140	4900	18

	A	B	C		D	E		F	G	H	J	X	Y	α	γ
			min.	max.		min.	max								
050	70	85	10	26	40	8	20	50	28	4	38	2	1	1°	9°
070	101	120	12	38	60	10	25	70	42	4	55	2	1	1°	7°
090	113	150	15	48	70	15	35	90	50	6	57	3	1	1°	7°
115	142	200	20	65	100	20	45	115	66	8	68	3	1	1°	7°
140	166	260	30	85	125	25	55	140	80	8	78	3	1	1°	7°
170	180	260	30	85	125	30	65	170	80	8	92	3	1	1°	4°